

## Programming the Myrio Remote

- Turn on the device
- Press the Tv Button on the Myrio Remote
- Press and hold Setup until the Red LED light on the MYRIO REMOTE blinks twice
- Enter the first CODE seen below

### Please see subsequent pages for specific code

The LED light on the remote blinks once as each digit is entered if the code is correct the led will blink twice after the last digit is entered.

**NOTE:** If the Led does not blink twice repeat steps 2 to 4.

- Aim the remote at device and press POWER  
the Device should turn off. If it does not then repeat steps 3 to 5 trying each code for your device  
If you cannot find a code that works see **SEARCHING FOR YOUR CODE** below

### Searching for your code

If your device does not respond to any of the codes above try searching for your code:

- Press the TV Key once
- Press and hold Setup until the Red LED light blinks twice
- Enter 9 9 1 then press 1 to begin the code search  
the LED Blinks Twice

• Aim the remote at the device and press POWER  
The remote sends IR codes from its library to the Selected Device Starting with the most popular code first. If the device responds go to step 6

- if the Addison does not respond press CH+  
the remote will try the next code. Continue until the device responds

NOTE: Press CH- to try previous code

- To set the code, press SETUP once.  
the LED Blinks Twice.

## Programming the Myrio Remote

Television	SOUTH SLOPE remote 4-digit codes	MYRIO Remote 5-digit codes
Addison	none	10092
Admiral	0093	10093, 10463
Advent	none	10761, 10842
Aiko	none	10092
Aiwa	none	11914
Akai	0030	10812, 10702, 10030, 10672, 11903
Albatron	none	10700, 10843
America action	none	10180
Anam	none	10180
Anam National	0180	10250, 10650
Anhua	none	10051
AOC	0030, 0019	10451, 10093, 10180, 10060, 10030, 10178, 10092
Apex Digital	none	10748, 10765, 10879, 10767, 11943
Audiovox	0451, 0180, 0092, 0623	10451, 10180, 10875, 10092, 10623
Baile	none	10661
Baysonic	0180	none
Belcor	0019	none
Bell & Howell	0154, 0016	10154
BenQ	none	11032
Bradford	0180	10180
Broksonic	0236, 0463	10236, 10463, 11911, 11938, 10030, 11935, 11929
Cailing	none	10748
Candle	0030, 0056	10030
Carnival	0030	10030
Carver	0054	10054
Celebrity	0000	10000
Celera	none	10765
Cinema	none	10672
Citizen	0060, 0030, 0056, 0039, 0092	10060, 10030, 11928, 10092
Clarion	None	10180
Commercial Solutions	none	11147, 10047

## Programming the Myrio Remote

Television	SOUTH SLOPE remote 4-digit codes	MYRIO Remote 5-digit codes
Conrowa	None	10156, 10145, 11156
Contec	0180	10180
Craig	0180	10180
Crosley	0054	10054
Crown	0180, 0039	10180
Curtis Mathes	0047, 0054, 0154, 0051, 0451, 0093, 0060, 0030, 0145, 0056, 0016, 0039, 0166, 0466, 1147, 1347	10047, 10054, 10154, 10451, 10093, 10060, 10702, 10030, 10145, 10166
CXC	None	10180
Daewoo	0451, 0019, 0039, 0092, 0623, 0624	10154, 10451, 10180, 10030, 10178, 10672, 11928, 10092, 10661, 11909, 10623, 10700
Dayu	None	10661
Dell	None	11080
Denon	0145	10145
Dumont	0017, 0019	10017
Durabrand	None	10463, 10180, 10178, 10171, 11034
Electroband	0000	00000
Emerson	0154, 0236, 0463, 0180, 0282, 0178, 0019, 0179, 0039, 0177, 0623, 0624	10154, 10236, 10463, 10180, 10178, 10171, 11944, 11909, 11929, 11905, 11928, 10623, 10700
Envision	0030	10030
Fisher	0154	10154
Fujitsu	0179	10809, 10853
Funai	0180, 0179, 0171	10180, 10171, 11904
Futuretech	0180	10180
GE	0047, 0051, 0451, 0093, 0282, 0178, 0021, 0135, 1147, 1347	11147, 10047, 11454, 10051, 10451, 10180, 10030, 10178, 11917, 10092, 11907, 11926
Gibraltar	0017, 0030, 0019	10017, 10130
Goldstar	0030, 0178, 0019, 0056, 0039	10154, 10030, 10178, 11926
Grunpy	0180, 0179	10180
Haier	None	11034
Hallmark	None	10178
Hankook	None	10180, 10030, 10178

## Programming the Myrio Remote

Television	SOUTH SLOPE remote 4-digit codes	MYRIO Remote 5-digit codes
Harley Davidson	0179	11904
Harman/Kardon	None	10054
Harvard	0180	10180
Havermy	None	10093
Helios	None	10865
Hello Kitty	None	10451
Hisense	None	10156, 10748, 10145, 11156
Hitachi	0145, 0056, 0151	10156, 10030, 10178, 11145, 10145, 10092, 11904, 11156
Hongmei	None	10093
Huafa	None	10145
Huari	None	10145
Huodateji	None	10051
Imperial Crown	None	10661
Infinity	0054	10054
Inteq	0017	10017
JBL	0054	10054
JCB	0000	10000
Jean	None	10156, 10051, 10236, 10092
Jensen	None	10761
Jiahua	None	10051
Jinfeng	None	10051
Jinxing	None	10054, 10156, 10145
JVC	0053	10053, 11923, 11253
Kangli	None	10661
KEC	0180	10180
Kenwood	0030, 0019	10030
KLH	None	10765, 10767
Kolin	None	10180, 10150, 10053
KTV	None	10180, 10030
Kunlun	None	10051, 10661
LG	0056	10060, 10030, 10178, 10856, 10700, 10025
Lloyds	None	11904

## Programming the Myrio Remote

Television	SOUTH SLOPE remote 4-digit codes	MYRIO Remote 5-digit codes
LXI	0047, 0054, 0017, 0154, 0156, 0178, 1347	10047, 10054, 10154, 10156, 10178
Magnasonic	None	11928, 11913
Magnavox	0054, 0030, 0179	11454, 10054, 10030, 10706, 11931, 11254, 11913, 11904, 11944
Maxent	None	11755
Memorex	0154, 0250, 0150, 0060, 0178, 0056, 0016,	10154, 10463, 10150, 10178, 11911, 11926, 11924, 11920, 11927
MGA	0150, 0030, 0178, 0019	10150, 10030, 10178, 11907
Mitsubishi	0093, 0150, 0178, 0019	10154, 10250, 10093, 10236, 10180, 11250, 10150, 10030, 10178, 11917, 10836
Monivision	None	10843, 10700
Motorola	0093	10093
Orion	0236, 0463, 0179	10236, 10463, 11929, 11911, 11905
Panasonic	0047, 0054, 0154, 0156, 0051, 0093, 0165, 0150, 0060, 0053, 0178, 0145, 1347	10054, 10250, 10051, 10650, 11941, 11927, 11924
Phillips	0054, 0017, 0000, 0021, 0019, 0039, 0250,	11454, 10054, 10000, 10051, 10030, 10178, 10092, 10690
Pioneer	0166	10166, 10866, 10679
Proscan	0047, 0030, 1347	1147, 10047, 11922
Quasar	0051, 0250, 0165	10250, 10051, 11924, 10650
Radio Shack	0047, 0154, 0165, 0180, 0030, 0178, 0019, 0056, 0039	10047, 10154, 10180, 10030, 10178, 11920, 11904
RCA	0047, 0051, 0093, 0019, 0090, 0135, 1047, 1147, 1247, 1347	11447, 10047, 11454, 10000, 10030, 10178, 11547, 11922, 11917, 10092, 11907, 11948, 10090, 10679
Realistic	0154, 0165, 0180, 0030, 0178, 0019	10154, 10180, 10030, 10178
Samsung	0060, 0030, 0178, 0019, 0056, 0039	10154, 10156, 10060, 10812, 10702, 10030, 10178, 11060, 10814, 10092, 11903, 10090,
10766		
Sanyo	0154	10154, 10156, 10180, 10145, 11907
Sears	0047, 0054, 0154, 0156, 0178, 0179, 0056, 0171	10047, 10054, 10154, 10156, 10178, 10171, 11926, 11904

## Programming the Myrio Remote

SOUTH SLOPE  
remote

MYRIO Remote

### Television

#### 4-digit codes

#### 5-digit codes

Sharp	0093, 0165, 0039	10093, 10030, 10650, 11917
Sony	0000	11100, 10000, 10650, 11925, 11904
Sound Design	0180, 0178, 0179	10180, 10178
Sylvania	0054, 0030	10054, 10030, 10171, 11944, 11931
Symphonic	0171	10180, 10171, 11913, 11904
Toshiba	0154, 0156, 0060	10154, 10156, 100600, 10145, 11945, 11704, 11936, 11156, 11935, 10650, 11918
Viewsonic	None	11755, 10885, 10864
White Westinghouse	0623, 0624	10463, 11909, 10623.
Zenith	0017, 0016, 0092	10017, 10463, 10178, 11904, 11929, 11911, 11909, 10092

A Local Company, A World of OPTIONS™