

Remote Control Guide



Controlling The Remote

GUIDE
Access the Program Guide.

Arrows/OK/Select
Press to navigate through the guides, menu options, or to make selections.

EXIT
Exit the current screen.

Yellow, Blue, Red, Green
Access additional features on your STB.

VOL
Raise or lower the volume.

MUTE
Turn the sound off or on.

REW
Rewind through parts of a recording or live show.

STOP
Stop watching a recording, stop a recording in progress, or stop watching a Restarted program.

PAUSE
Pause the program you are currently watching. While paused, the Fast-Forward button will play the program frame by frame in slow motion.

TV INPUT
In TV control mode, will change the input of the device you are controlling.

MENU
Displays the Main Menu.

INFO
Display the current channel and program information. Press again for more detail.

FAV
View your favorite channels.

CH
Changes to the next higher or lower channel.

ON DEMAND
Access video on demand services.

LAST
Recall the last channel or option.

FFWD
Fast forward through parts of a recording or Restarted program.

PLAY
Begin or resume watching a recording. Also displays the playback bar.

REC
Record a program.

Number Keys (0-9)
Directly select a channel or enter options.

CC
Toggle closed captioning on or off.



WHAT'S ON TV?

There's more than one way to see what's showing on TV.

Info Button:

Press Info and you will see the name and a description of the current program at the top of the screen.

OK Button:

Press OK to show the 'Now Playing' bar and you will see what program is currently playing.

Guide Button:

This is the most comprehensive view of what's on. Go ahead and page through...
...you're bound to find something to watch.

Browse Button: (Right Arrow Button)

Press the Right Arrow Button to show the 'Info Bar' at the bottom of the screen which shows you the channel number, channel name, current date and time, program name, date and time the program airs, a progress bar, and the program that airs next.